
Specification

- LCD monitor / TV from 4.5 to 6.5 kgs.
- Meets VESA mounting standard: 75x75 mm.
- Between TV backside and wall distance: 435 ~ 1466 mm.
- LCD monitor / TV can be swiveled: ±120 degrees.
- Tilt downwards / upwards :± 20 degrees.
- Includes screws for concrete and wood plate.

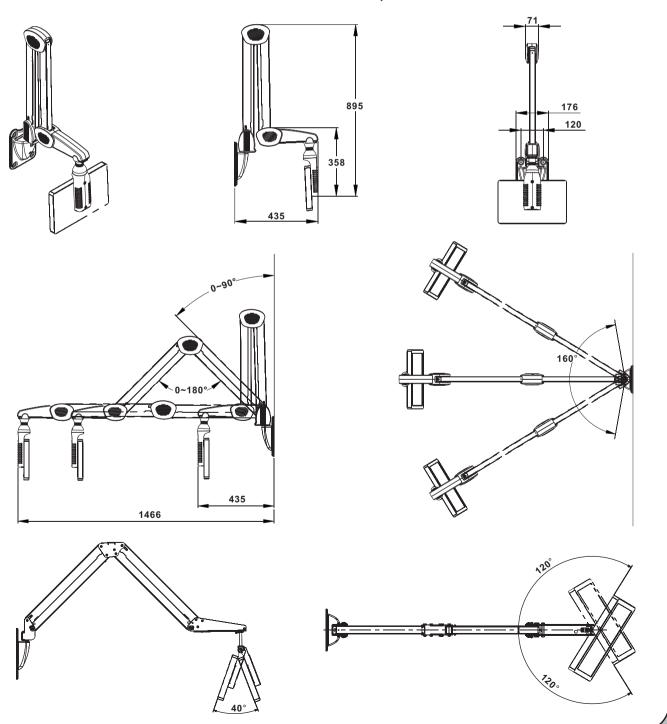

Parts List

MAIN PARTS

ITEM	1	2	3	4	5	6	7	8
PART								
QTY	1	1	1	1	1	1	1	1

PARTS FOR TV BRACKETS

ITEM	9
PART	₩ ₩4X6
QTY	4

Pin

ITEM	10		
PART			
QTY	11		

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all of the safety and operating instructions before using this uspension arm. Keep these instructions for future reference.



WARNING: This arm contains internal springs under tension. AN ARM RECOIL ACCIDENT HAZARD IS POSSIBLE. FOLLOW ALL SAFETY INSTRUCTIONS AT ALL TIMES.



CAUTION: Keep the SAFETY
BRAKE PIN in place UNTIL arm is on
wall mount and TV is in place. THEN,
remove and use to secure cover plate.




CAUTION: ALWAYS put SAFETY
BRAKE PIN in place before removing
TV arm, or arm from wall.




To prevent fire or shock hazard, DO NOT EXPOSE this apparatus to rain or moisture.

installation

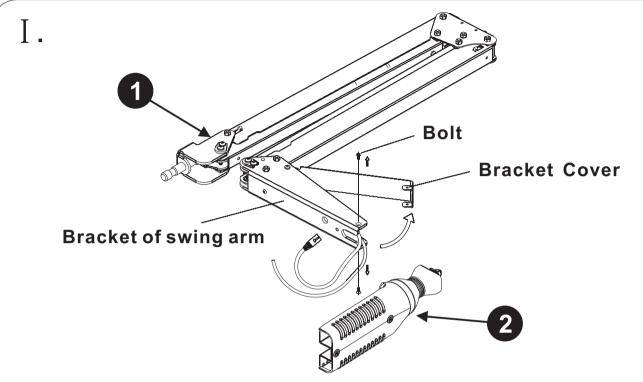


Remove the screws from the swing arm covers, and lift the bracket cover at the main arm.

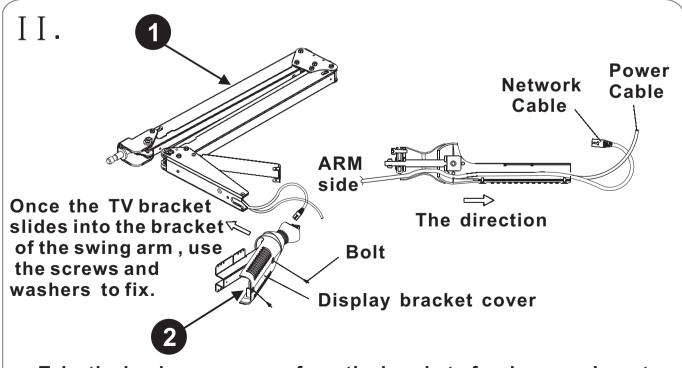


Take the back cover screw from the bracket of swing arm, Insert the electric wires according to the attached photo, Use the Bolts and washers to fix.

installation

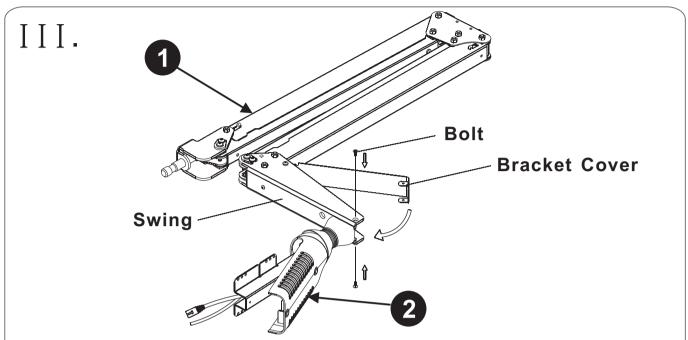


Once the electric wire is in the right position, then cover the bracket cover and use the bolt to tighten the two sides of the main swing arm.

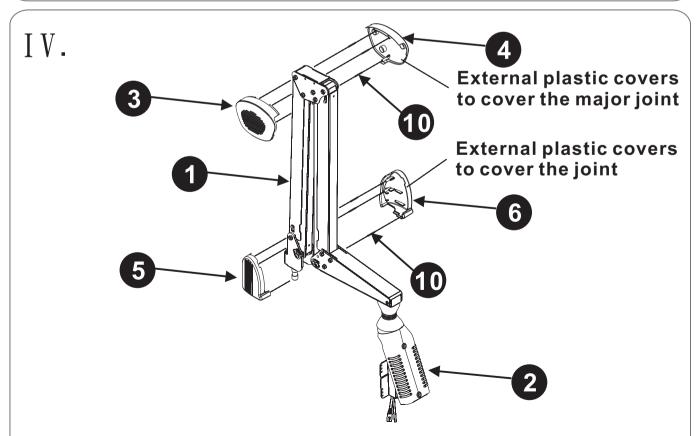


Take three pcs of pin to press and fix the external plastic covers according to the location, that shown from the drawing.

installation

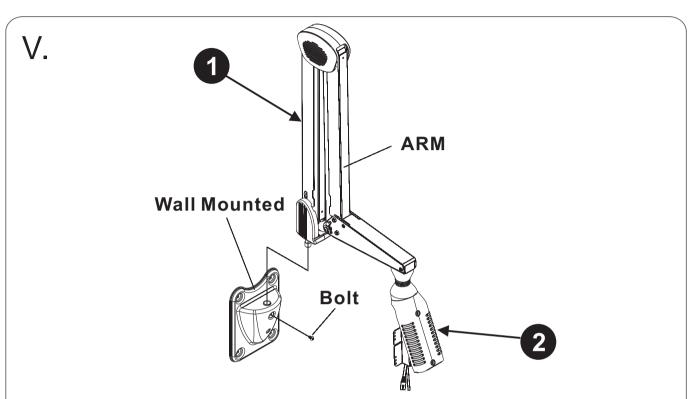



Plug in the main arm in the slot at the wall mounted, Use the fixing Bolts to lock according to the attached picture.

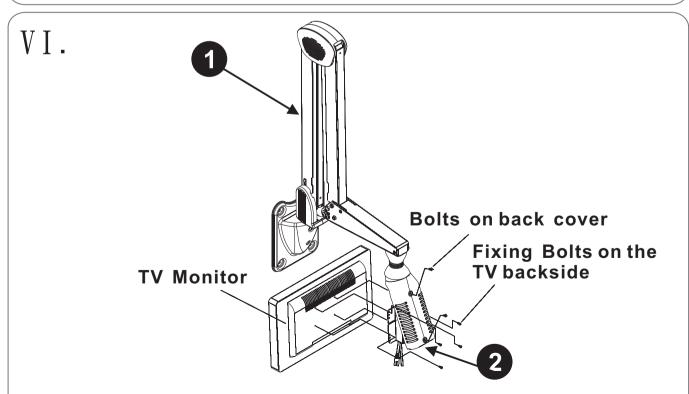

Use four Bolts to fix the TV monitor, then use two Bolts to fix the back covers. Connect the electric wire with the slot.


installation

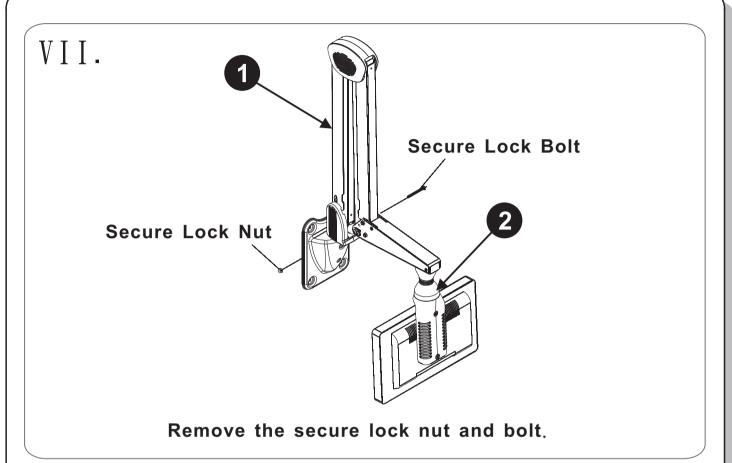

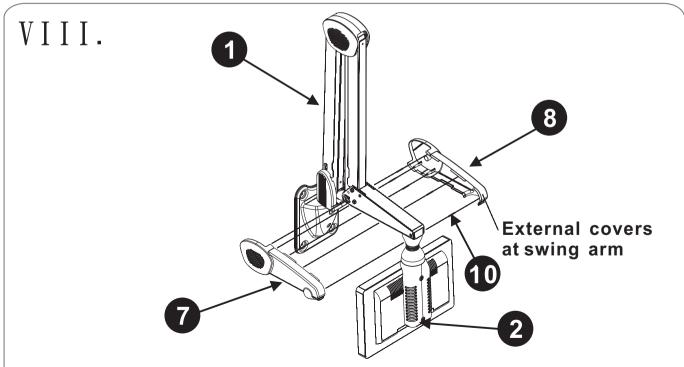

Take five pcs each of pin and swing arm external covers push, Press to the fix feature according to the location shown from the picture.

installation

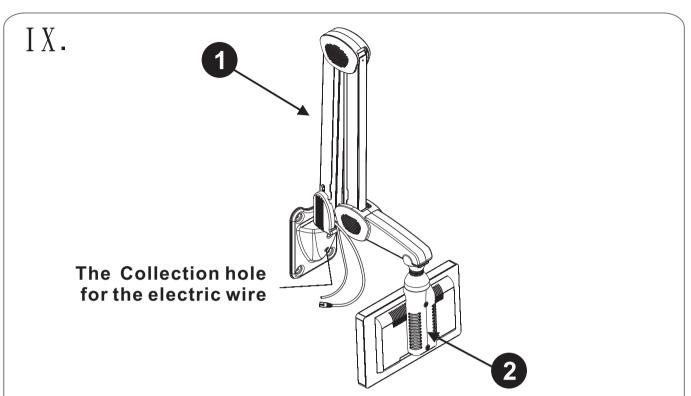

Gather the electric wire (at the arm side) and put them in the collection hole.