



User Guide

F-250



Revision 0.1

Copyright © 201

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of ProDVX.

Disclaimer

The information in this document is subject to change without notice. ProDVX makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. ProDVX reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of ProDVX to notify any person of such revisions or changes.

Trademark Acknowledgments

ProDVX is a trademark

Other product names mentioned herein may be trademarks or registered trademarks of their respective companies.



Introduction

Thank you for purchasing the ProDVX F 250, the very finest in HD media players.

Please read this user manual thoroughly before installing and operating your ProDVX F 250.

Should you not have all of the instructions or you wish to obtain revisions, please contact your local dealer or reseller.

Table of content

Introduction.....	3
Important precautions	5
On Safety	5
On Installation	6
On Cleaning	6
On Repacking.....	6
On Disposal.....	6
Installation and setup.....	7
In the box:.....	7
Installation sequence	7
Setup sequence	8
Remote control.....	13
Operation mode	14
Manual content selection.....	14
Auto play from USB device	14
Copy from USB stick to SD card	14
Connection to PC.....	15
Display menu	15
Features and specifications	18
Trouble shooting	19

Important precautions

This system has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.



This symbol warns the user not to expose the unit to moisture. Therefore, take care of the environment humidity and cleaning of this unit.



This symbol warns user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.

On Safety

Use only approved cabling and ProDVX power supply with the unit. If the power cable of the power supply is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the player only from a power source indicated in the specifications of this manual or listed on the player. If you are not sure what type of power supply you have in your home or office, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not open the Power Supply:

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the product on a sloping shelf unless properly secured.
- Do not drop an object on or apply impact to the product.

To Prevent Fire or Hazards:

- Always turn the player OFF if you do not use the system for more than a short period of time.

- Do not drop or push objects into the units cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this system.
- When the system is to be left unattended for an extended period of time, unplug it from the wall outlet.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the player where the power cord is subject to damage.

Do not use this system near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool. Power supply and display units are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the ventilation slots by placing any of the system components on a bed, sofa, rug, etc.
- Place the system in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the system near or over a radiator or heat source.

Do not rub or strike the player unit with anything hard as this may scratch or damage the housing permanently.

Use the recommended resolution of the LCD display to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image burn-in. Commonly burn-in and related problems are not covered by the warranty of a monitor.

Do not shock or scratch the front, back and sides of the player with metallic objects. Otherwise, it may cause damage to the player.

On Cleaning

- Unplug the player before cleaning the player.
- Use a dry cloth.
- Do not use alcohol (methyl, ethyl or isopropyl) or any strong dissolvent. Do not use thinner or benzene, abrasive cleaners or compressed air.
- Avoid getting liquids inside your player. If liquid does get inside, have a qualified service technician check it before you power it on again.
- Do not wipe the player with a cloth or sponge that could scratch the surface.

On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

Installation and setup

In the box:

- ProDVX F 250 player
- Power supply 12V / 2A
- US power supply adapter
- EU power supply adapter
- Remote control CT-E007
- Remote control extender
- AV cable
- Audio cable
- User manual

Optional:


- VGA cable
- HDMI cable

Installation sequence


- 1) Verify if you have all required components
- 2) Make sure you have a wall-outlet for powering the power-supply within reach
- 3) Connect the player to a monitor using a VGA, HDMI or AV cable.
- 4) When you use the VGA or Composite video output the audio signal is routed to the audio output. When you use the HDMI output the audio signal is routed to the HDMI output.
- 5) Insert a SD card or USB stick which contains the content you want to play.
- 6) Connect the power-supply to the player.
- 7) Connect the power supply to the AC socket outlet.
- 8) Turn on the monitor.
- 9) When after a few minutes no image appears on the monitor please use the green button of the remote control the select the right video output of the ProDVX F250 player.

Setup sequence

- 1) Press the remote control "SETUP" button.

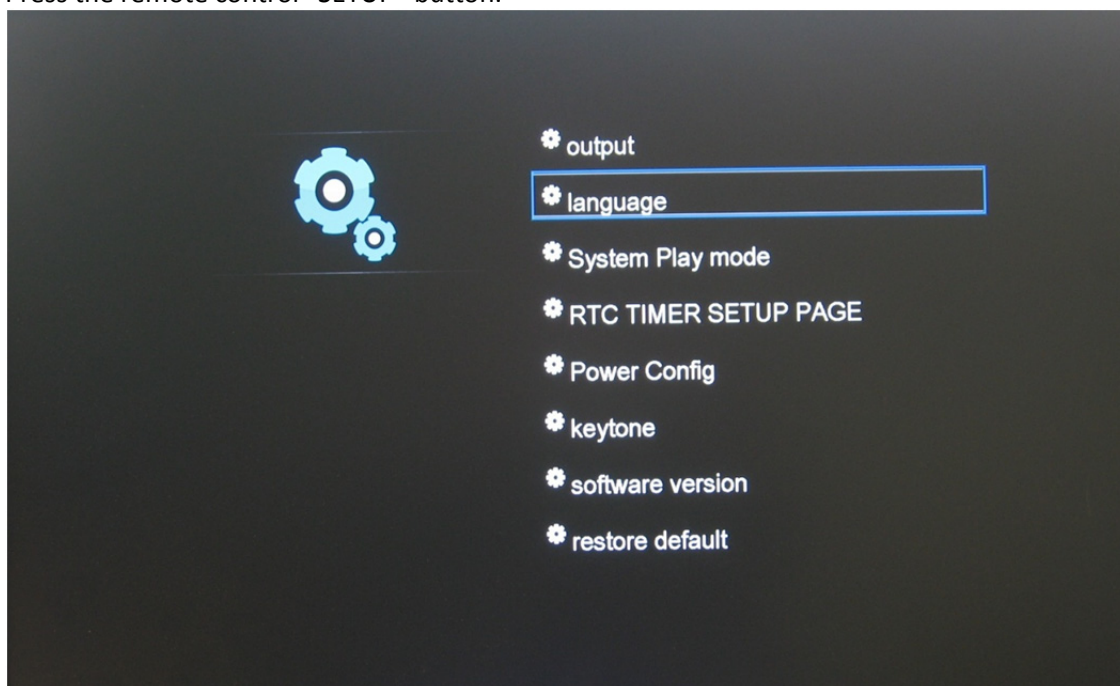

- 2) Select "output" by using the arrow and PLAY/PAUSE buttons. Select the preferred video output: Pal/NTSC for AV output, HDMI-720P(50HZ) /HDMI-720P(60HZ)/HDMI-1080I(50HZ)/HDIM-1080I(60HZ)/HDMI-1080P(50HZ)/HDMI-1080P(60HZ) for HDMI output, VGA(1920*1080)/VGA(1024*768) for VGA output.

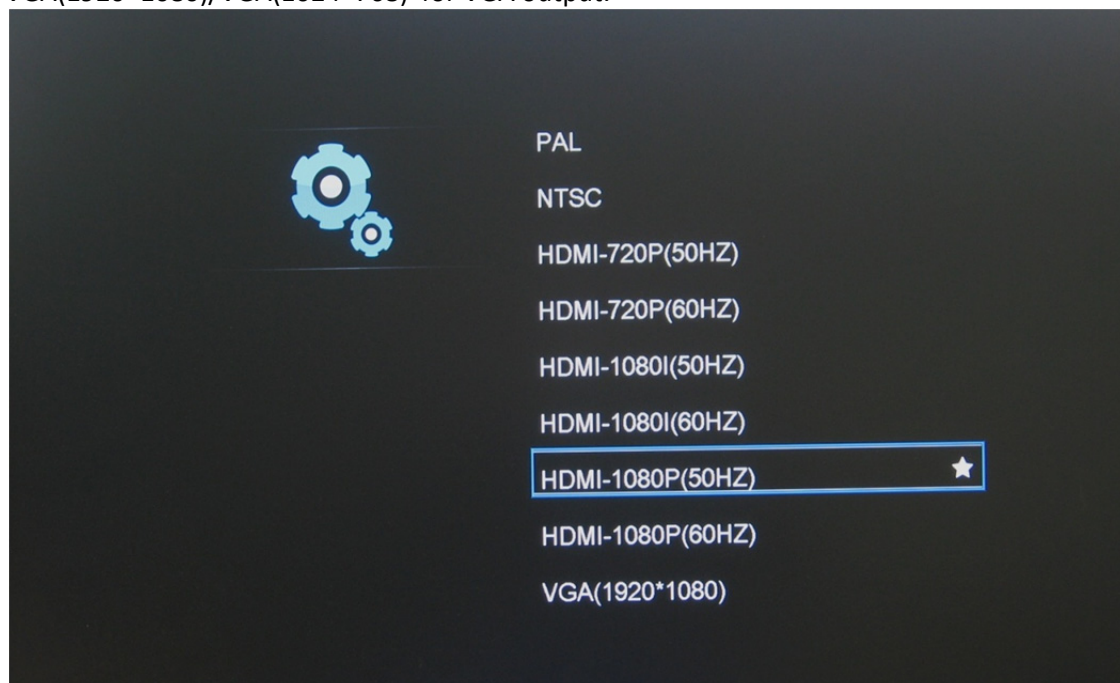

- 3) Select "language". Select the preferred language: Chinese / Trd Chinese / English / Russian / Portuguese / Spanish/ Korean / Hungarian.
- 4) Select "System Play Mode". Select the preferred play mode Play mode 1-9.

Play Mode 1 :

After power-up the F-250 plays the content files in a loop. The “0” to “9” buttons of the remote controls do have no function.

Play Mode 2 :

After power-up the F-250 plays the first movie in a loop. After pressing one of the buttons “2” – “9” of the remote control the F-250 will play the corresponding content file. When this content file is played the first content file will be played in a loop again.

Example: the SD card contains the content below

Clip_01.mpg After power up this content is played in a loop.

Clip_02.mpg After pressing button “2” this content is played once. Return to Clip_01.mpg

Clip_03.mpg After pressing button “3” this content is played once. Return to Clip_01.mpg

Clip_04.mpg After pressing button “4” this content is played once. Return to Clip_01.mpg

Clip_05.mpg After pressing button “5” this content is played once. Return to Clip_01.mpg

Clip_06.mpg After pressing button “6” this content is played once. Return to Clip_01.mpg

Clip_07.mpg After pressing button “7” this content is played once. Return to Clip_01.mpg

Clip_08.mpg After pressing button “8” this content is played once. Return to Clip_01.mpg

Clip_09.mpg After pressing button “9” this content is played once. Return to Clip_01.mpg

Clip_10.mpg After pressing button “0” this content is played once. Return to Clip_01.mpg

After a play command you have to wait 3 to 5 seconds. Otherwise the screen “Please wait” will be shown.

Play Mode 3 :

This mode is almost the same as play mode 2. The difference: when playing the selected content no other content can be selected. The selected content will be fully played.

Play Mode 4 :

This mode is almost the same as play mode 2. The difference: more content files can be selected. You select content by the remote control up to number 999. You have to select the number within 2 seconds. Before selecting new content you have to wait 4 seconds.

Example: Select numbers 1 and 2 on the remote control within 2 seconds. The player will play the 12th content file.

Play Mode 5 :

This mode is almost the same as play mode 3. The difference: more content files can be selected as described in play mode 4.

Play Mode 6: :

After power-up the F-250 plays the first movie in a loop. When pressing an odd number on the remote control (1, 3, 5, 7 or 9) the next content file will be played. When pressing an even number on the remote control (0, 2, 4, 6 or 8) the previous content file will be played.

Play Mode 7 :

The player repeats the selected content. After a power down and power up the player starts playing the last played content. This mode only supports up to 10 selectable content files.

Play Mode 8 :

This mode is almost the same as play mode 7. The difference: up to 999 content files can be selected.


You have to select the number within 2 seconds. Before selecting new content you have to wait 4 seconds.

Example: Select numbers 1 and 2 on the remote control within 2 seconds. The player will play the 12th content file.

Play Mode 9 :


The content will be random played.

- 5) Select "RTC TIMER SETUP PAGE" to set the right time and date:

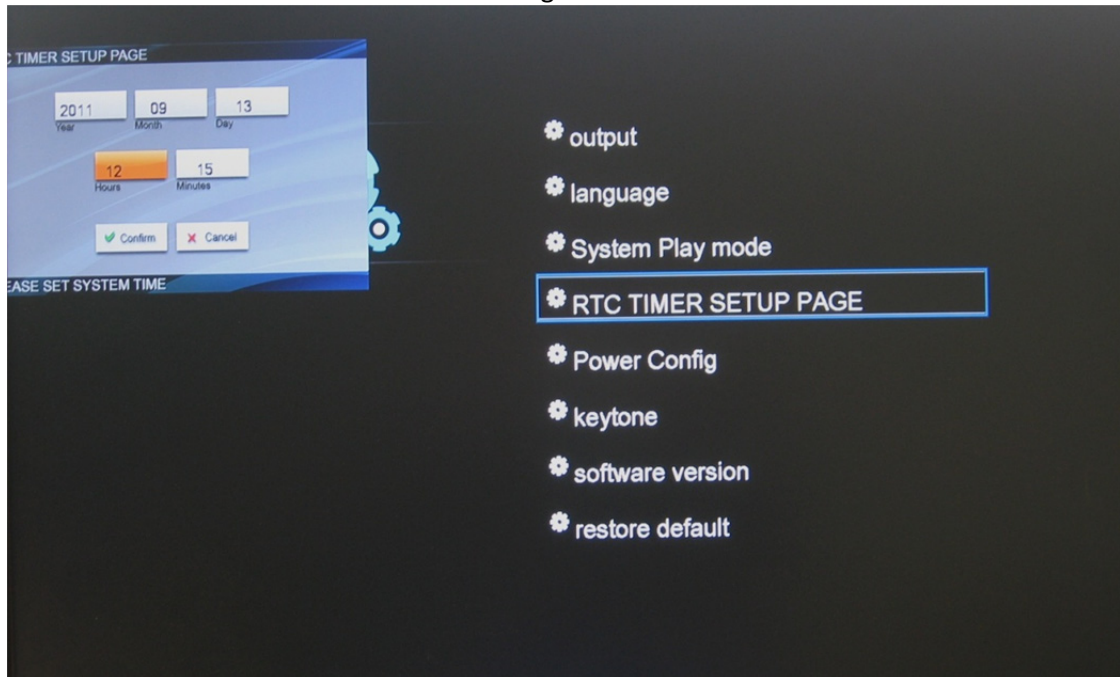


Select "Confirm" to save the time and date.


- 6) The power up and down time of the player can be set in the "Power Config" menu:

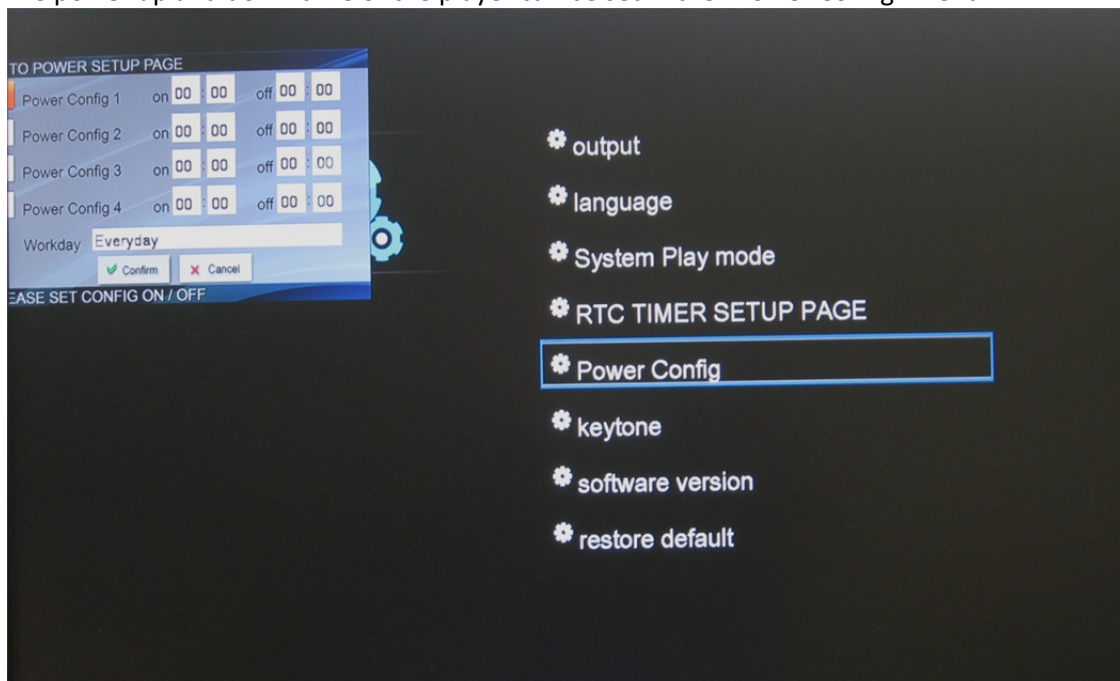


- 7) Select "keytone" to set the key tone on or off:

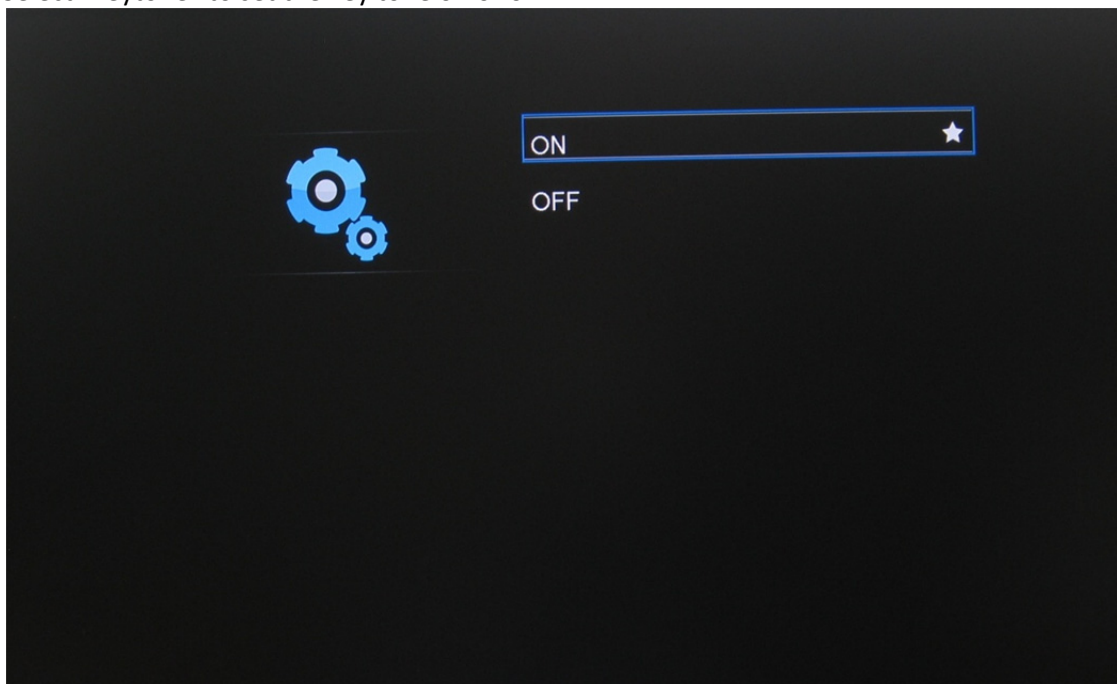

- 8) Select "software version" to display the software version:

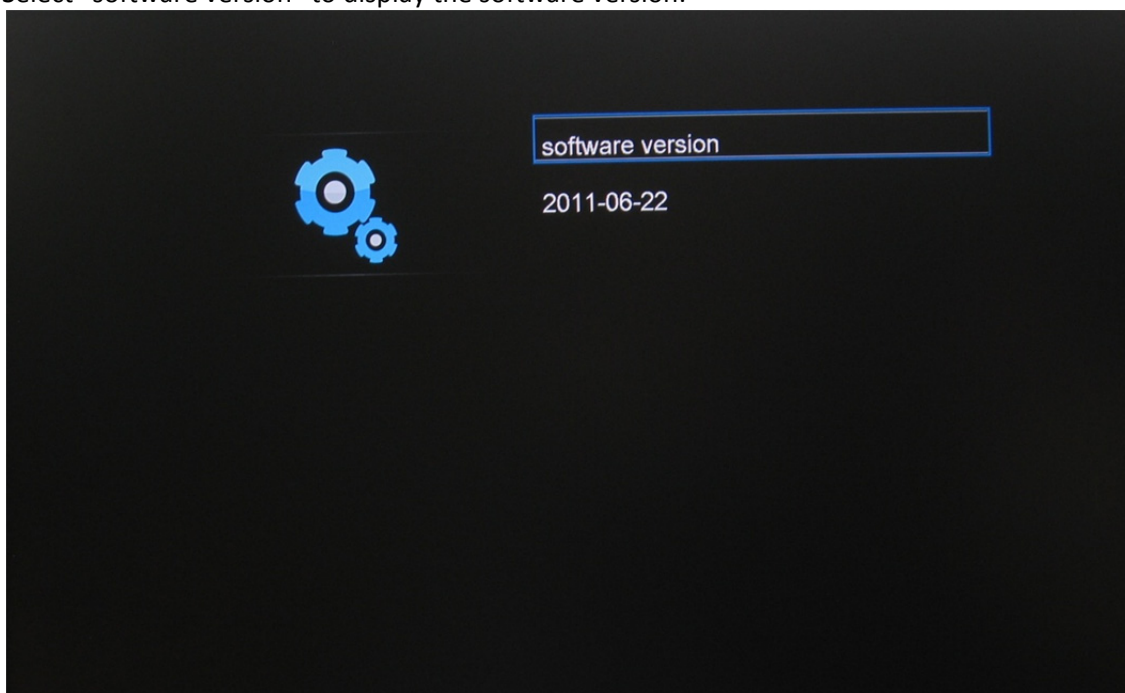

 - 9) Select “restore default” to restore the player to the factory settings:

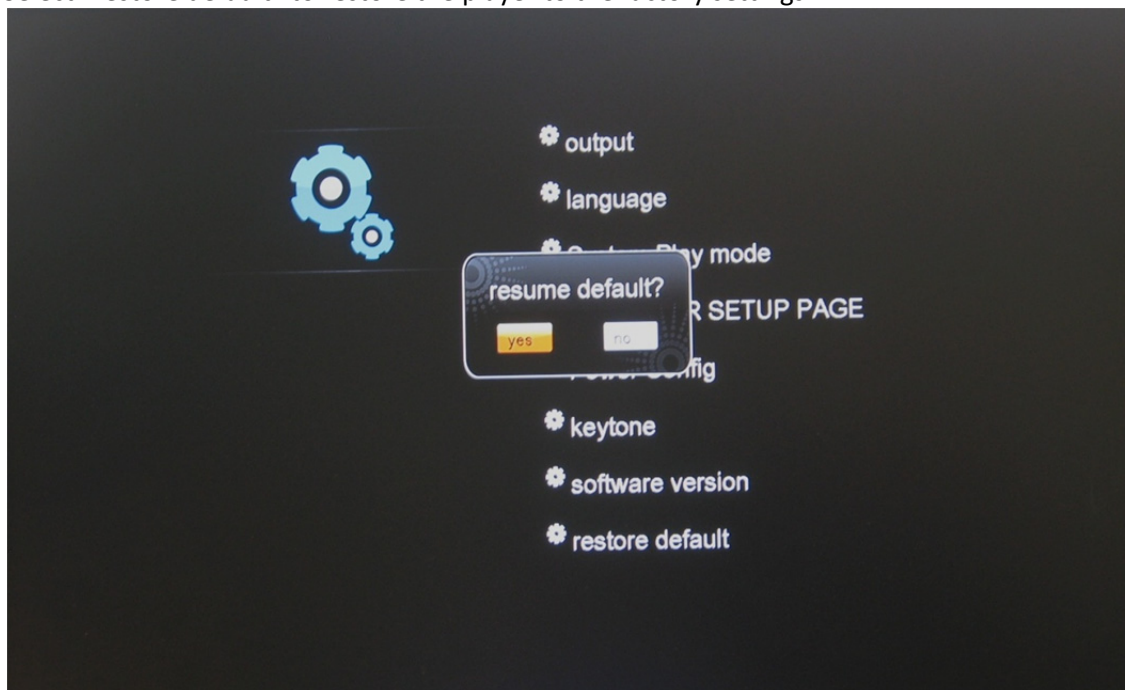

Select “yes” to confirm.

Remote control

POWER	POWER ON/OFF
SETUP	Changing settings
DISPLAY	Function Choose
CARD Selection	Choose a different memory card
MUSIC	Go to and display music files
PHOTO	Go to and display photo files
MOVIE	Go to and display movie files
FILE	Go to file library (all files)
ROTATE	Rotate Photo 0/90/270 degrees
ZOOM	Zoom *2/*4/*8/*16 time
REPEAT	Play File repeat unit Stopped
SLIDE SHOW	No function (choose from Display)
REW ⏮	Rewind movies
FF ⏭	Forward movies
PREV ⏮	Go to next file
NEXT ⏭	Go to next file
+ (VOLUME)	Raise volume
− (VOLUME)	Lower volume
MUTE	Mute volume
EFFECT	Choose Screen (Full screen/4:3/16:9)
↑	Move up
SLIDE Interval	Change slide show 1,3,5,7,10,15 sec.
←	Move left
PLAY/PAUSE ▶▶	PLAY/PAUSE, confirm selection
→	Move right
↓	Move down
STOP	Stop the selection file action
Restart	“Return” Function
Clock	Show time and calendar
1,2,~8,9,0	Number Key
•	HDMI/VGA/AV change
•	USB copy to SD card key
Menu	No function
▶	No function
◀	No function

 


Preparing remote control for first use. The remote control is shipped with a plastic contact breaker between the battery and contact. You must remove this contact breaker before use.


Operation mode

Manual content selection

Select the EXPLORE button:

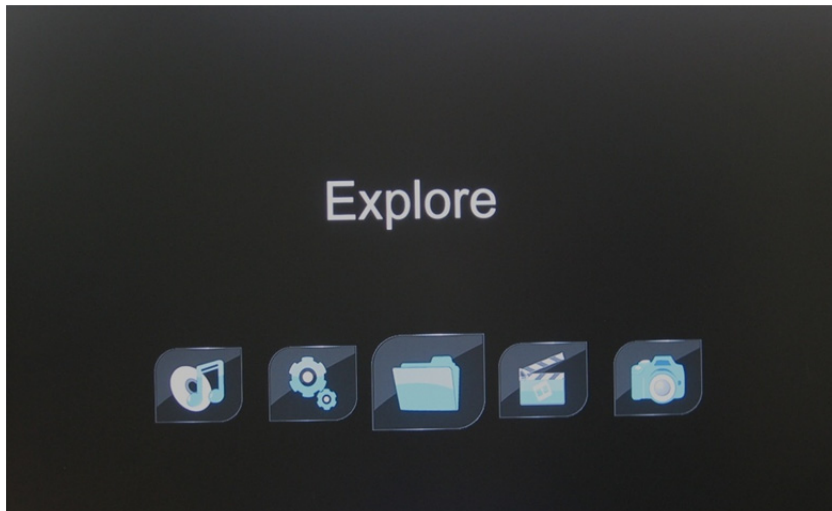

Select the location of the content, USB disk or SD card:

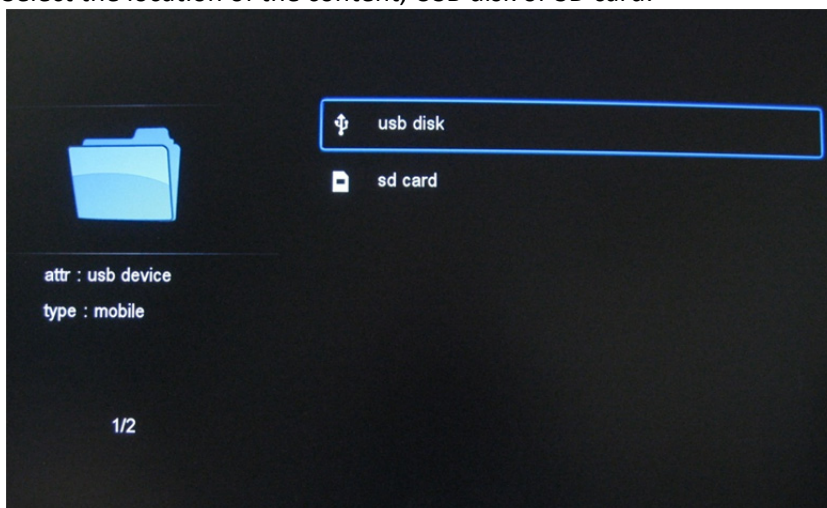

Select the content you want to play.

Auto play from USB device

When the F250 is powered up you can easily play content from a USB stick or USB hard disk by inserting this USB device. The F250 will start playing the content on this device automatically.

Copy from USB stick to SD card

Power down the F250.

Insert the USB stick which contains the content you want to copy to the SD card.

Power up the F250.

The F250 will erase the content on the SD card and starts copying the content from the USB stick to the SD card.

Connection to PC

You can connect the F250 to a PC and copy content to the SD card of the F250.

Power down the F250 and connect the F250 to the PC by using the small USB port on the F250. This USB port has the label "PC".

The PC will recognize the SD card in the F250 as a removable device.


Display menu

The F250 can play music, pictures and videos.

When content is played you can get the DISPLAY MENU by pressing the "DISPLAY" button of the remote control.

Short description of the icons:

Music

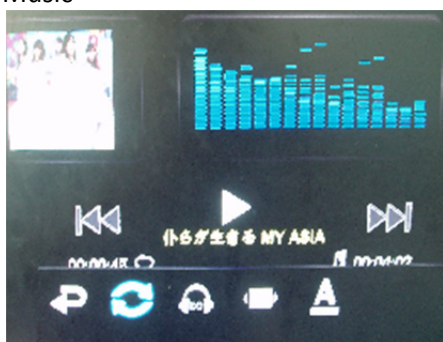

Return to previous Page



Repeat mode: only one/one /all/sequence/ random



Equalizer mode: Nature/DBB/POP/ROCK/Classic/Jazz/Vocal/Dance/Soft



Spectrum/Lyric



Blue/Red/Yellow/Green/Orange

Video



Track



Subtitles



UTF-8 code: Chinese BIG5, Chinese GBK, Russian cp1251, Western European, Central European, Korean



Subtitles: White/Red/Blue/Yellow/Green



Small Subtitle Size



Screen mode: Video full screen/screen full screen/default/4:3/16:9/fit view



Repeat mode: only one/rotate one /rotate all/sequwnce/ random



Audio mode: Stereo/left channel/right channel

Pictures



Return to previous Page



Play and Pause



Zoom +/ Zoom -/ Rotate right/rotate left/



All pictures on Screen



Default/Random_switch/fade in fade out/Persian blinds H/Persian blinds V/

Slide up/slide down/slided left



slide interval 1s/3s/5s/7s/10s/15s



seq next/seq pre/random_switch

Features and specifications

- 1) Supports: Photo, Music, Video File, Viewer Function
- 2) Supported File Formats: MPGL, MPEGII, MPEG4+XVID(SP,ASP), DIVX(HD1080P), H264(SP/MP/HP), H.263(BP) , WMV9/VC-1(SP/MP/AP)/RMVB(V8/V9)
- 3) JPEG High Resolution support: 1900*1600(max)
- 4) Supports Auto-play
- 5) Infrared Remote Control and remote control extension
- 6) OSD Multi-languages: Chinese, Trad Chinese, English, Russian, Portuguese, Spanish, Korea, Hungarian
- 7) Auto Power on/ off up to 4 times a day
- 8) Memory support: SD card and USB flash Memory
- 9) Supports AUTO copy function: USB auto copy to SD card function
- 10) Supported outputs: VGA /AV / HDMI
- 11) MOVIE : Repeat last played content memory support (system play mode 7 and 8)
- 12) Power Requirement: DC 12V/ 2A
- 13) Headphone support
- 14) Auto play from SD card ,USB , USB Hard Disk.
- 15) USB connection with PC: Move PC content to SD card.

Trouble shooting

Check the following before calling for service.

No image appears	
Is the power cord of the display connected?	Check and see if the power cord is connected properly to the power outlet.
Is the power indicator light of the display on?	Press the Power button.
Is the power cord of the F250 connected? Is the power indicator of the F250 on?	Check and see if the power cord is connected properly to the power outlet .
Is the video cable connected?	Check the connections of the video cable.
Do you see the message "No Signal!"?	Check the right video source is selected. Check the cable has a video signal. When possible: Disable the video inputs which are not in use. Check the video output mode of the F250.
Display image is incorrect	
Display Position is incorrect in RGB mode.	Go to auto adjust in the OSD menu to automatically adjust your display image to the ideal setting.
Are you using the "native resolution" in RGB mode?	Set the F250 to the "native resolution" of the LCD screen.
Remote control is not working	
Is the transparent plastic insulation part removed?	Remove the transparent plastic insulation part..
Is the battery empty?	Replace the CR2025 battery.
Is the IR receiver of the F250 covered?	Make sure the IR signal of the remote control can reach the IR receiver of the F250.

Office address:
ProDVX Europe BV
Ringbaan Oost 102-038
NL-5013CD Tilburg
The Netherlands

Telephone: + 31 (0)13 737 01 15

Mail: info@prodvx.com
Web: www.prodvx.com